

المختص  
للديكور  
The  
Specialist  
for Decoration



3D Soft leather wall panel & wall sheet



[www.sdecorationsa.com](http://www.sdecorationsa.com)



SDECORATIONS.A



SDECORATIONS.A




### 1. What's the Soft Leather Panel

- The panel is constructed by high quality synthetic PU Leather and high density memory PU foam, no back board and no glue. It can be cut by knife easily.

### 2. What's the features

- Light weight, Simple designs, Easy clean and installation, Safe
- No need high temperature and pressure to make the super 3D relieves.
- It's to make sure the long-life of the PU leather
- Fire Retardant and ZERO Formaldehyde emission
- Widely use on interior Wall and Ceiling

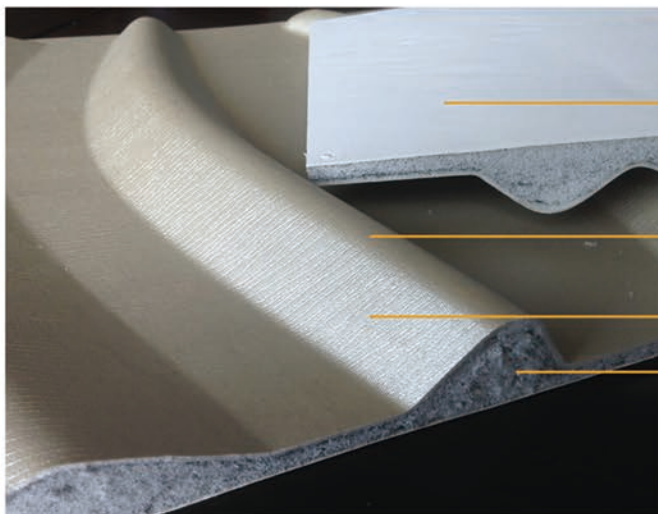

→ **Back side is covered by PU leather too. It's to prevent the moisture from the wall in Spring time.**

→ **Surface is covered by PU leather.**

→ **Water proof coating**

→ **Soft memory foam (Fire Retardant) inside**

### Suitable for Wall & Ceiling in:

**public areas:** retail shop, lounge, window display, kindergarten, baby center, circle column;

**private areas:** home theatre, bedroom, living room, wall and ceiling, wardrobe, door, ground mat;

**commercial areas:** hotel, cinema, theatre, KTV room, night club, restaurant, beauty salon, cafe shop;





### Zero - formaldehyde

It's perfectly realized and certified to ZERO formaldehyde emissions by SGS.

---



### Water and Moisture proof

Because of the excellent Pu leather on the back, it prevents the water and moisture to go through.

---



### Fire retardant

The fire retardant performance reaches B in EN13501 and GB8624, was certified by SGS. It also produces very low smoke, and it is the taste of bamboo charcoal after burning, not irritating.

---



### Sound proof

Because of the sharp 3D inclined block face and the high density foam inside, the sound will be faded and consumed gradually during the rebound between inclined faces.

---



### Soft and high rebound

The panel is composed of high density foam. Its high rebound means not ruffle, never deform. It has excellent effect of collision avoidance.

---



### Easy installation

No board on the wall, and no nail during installation, just use silicon to stick directly, free easy and fast.

---



### Secondary use

After period of time, if the panels must be removed, they can be torn off and installed on the other wall.

---



### Safety

Because of the light and soft, even if the wall paint falls off, the panels won't hurt people.

---



### Bend easily

The panel embodies the professional wisdom when there is the circle or square column or the corner.

---



### Acoustic absorption

The holes in the thick foam are to absorb the sound around.





Bed Headboard / Code : HS-016



TV feature wall / Code : HS-013



Thickness: 25 mm

Item No: URBEN / code : HS-061

Size: 2700x600x25mm (±1mm)



Home Theatre / Code : HS-015





Beauty Salon / Code : HS-015



Code : HS-061



Soft and high rebound



Club / Code : HS-068

Item No: URBEN  
 Size: 2700x600x 25 mm ( + 1mm)






Bed Headboard / Code : V-810



Home Theater / Code : HS-332

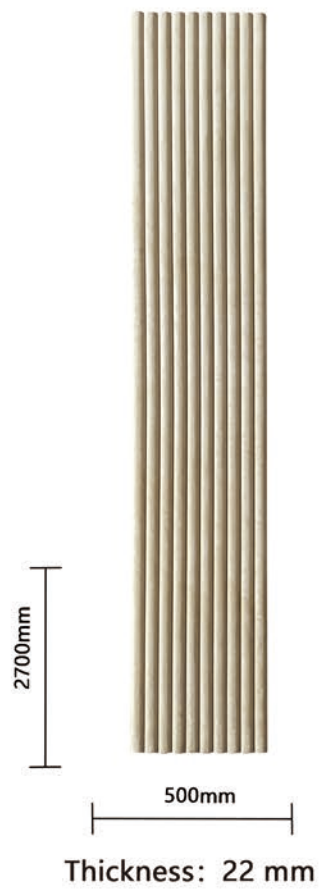

Item No: Aurora V-804  
Size: 2700x500x22mm (+1mm)



Living Room / Code : V-804






Bed Room / Code : V-804



Bed Headboard / Code : HS-015



Dress Room / Code : V-810

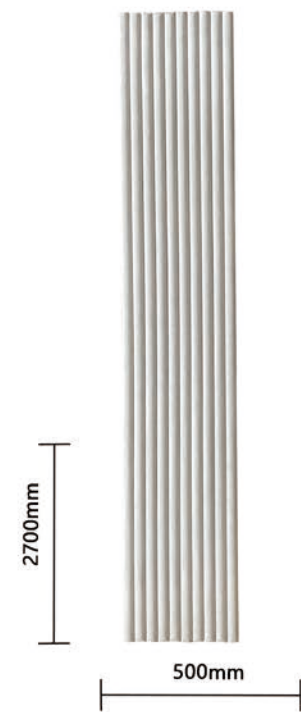


Item No: Aurora V-810  
Size: 2700 x500x22mm (±1mm)





Dinning Room / Code : HS-012

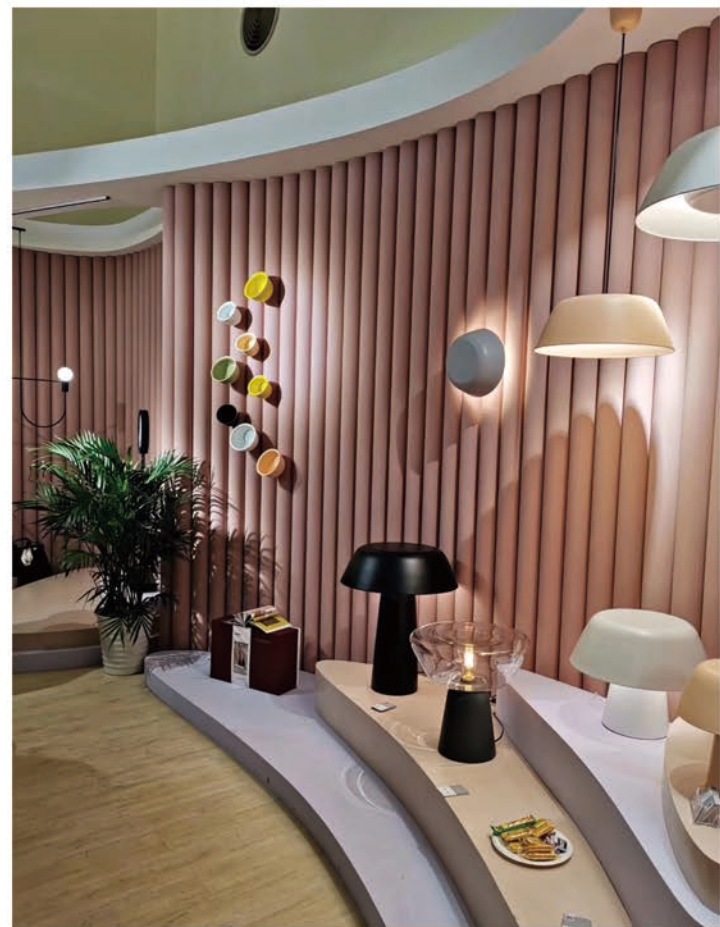

Shop Display / Code : V-802



Item No: Castle  
Size: 2400x500x45mm (±1mm)

07



Bed Headboard / Code : V-809






Bed headbaord / Code : V-041



Project installation site / Code : V-806



Bed Room / Code : V-804

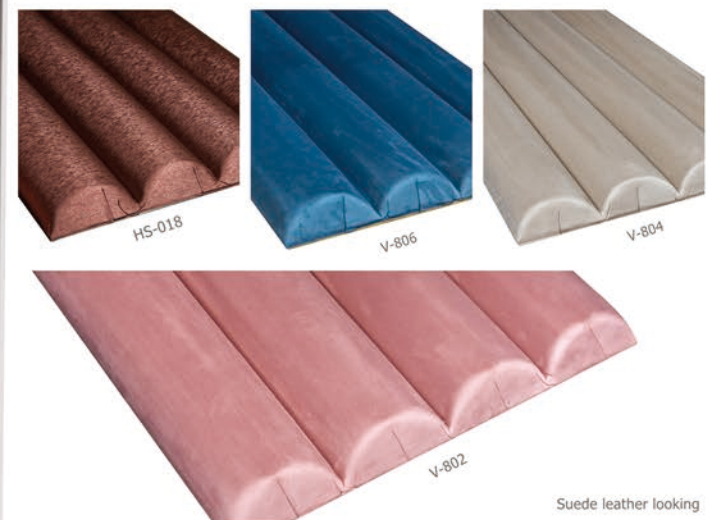


Suede leather looking

Item no : Castle -  
Size : 2400x500x45mm






Front Desk Feature wall / Code : V-809

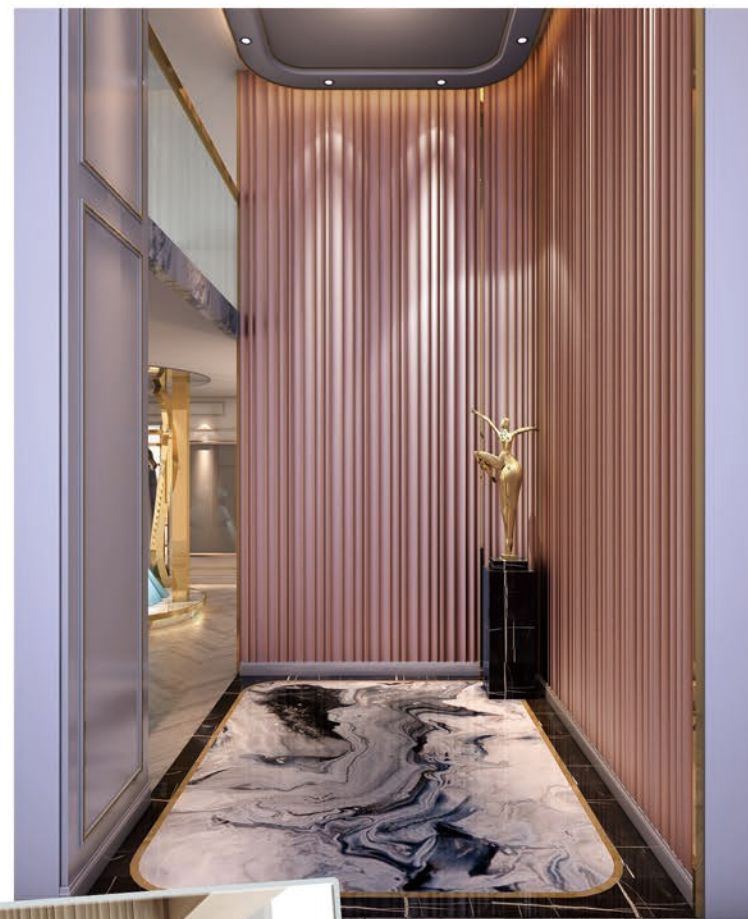

Shop display window / Code :V-802

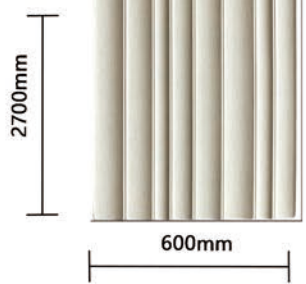

Thickness: 18 mm

Item No: Domingo / Code : HS-065  
Size: 2700x600x18mm (±1mm)



Hotel Doorway / Code : HS-065





Hotel Lounge / Code : HS-013



Code : HS-016



Office noise reduce wall / Code : HS-019



2700 mm

600mm

Thickness: 15 mm

Item No: Andes

Size: 600x2700x15mm (±1mm)




Company reception / Code : HS-012





Charming rest corner / Code : HS-015

Luxury Living room / Code : HS-012

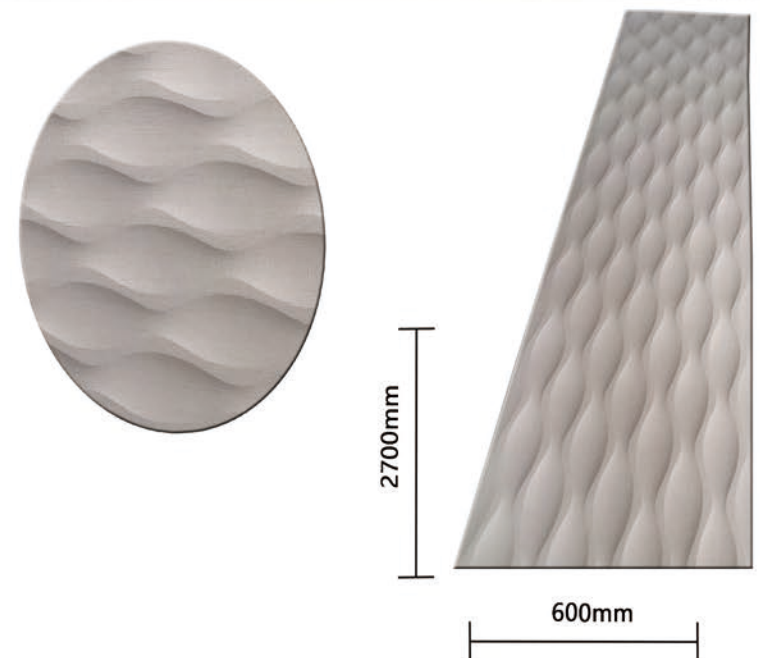

Item No: Medusa Thickness: 15mm  
Size: 600x2700x15 mm


Home Theater / Code : HS-332





Code : HS- 016


Soft bed headboard idea / Code : HS-010

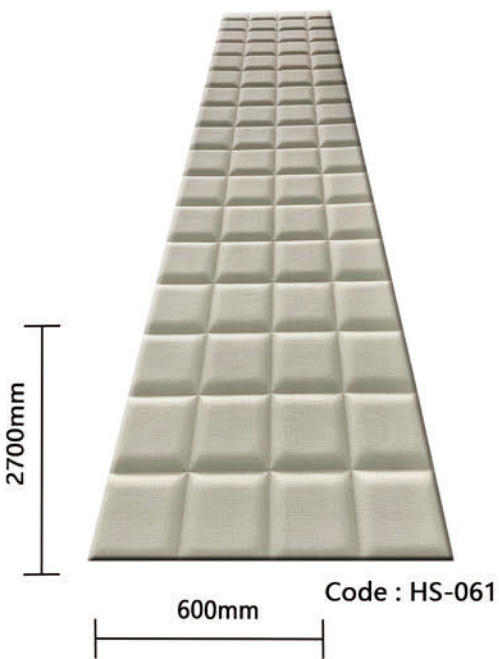

Code : HS-061

Thickness: 20 mm


Item No: Ferrero  
Size: 600x2700x 20 mm

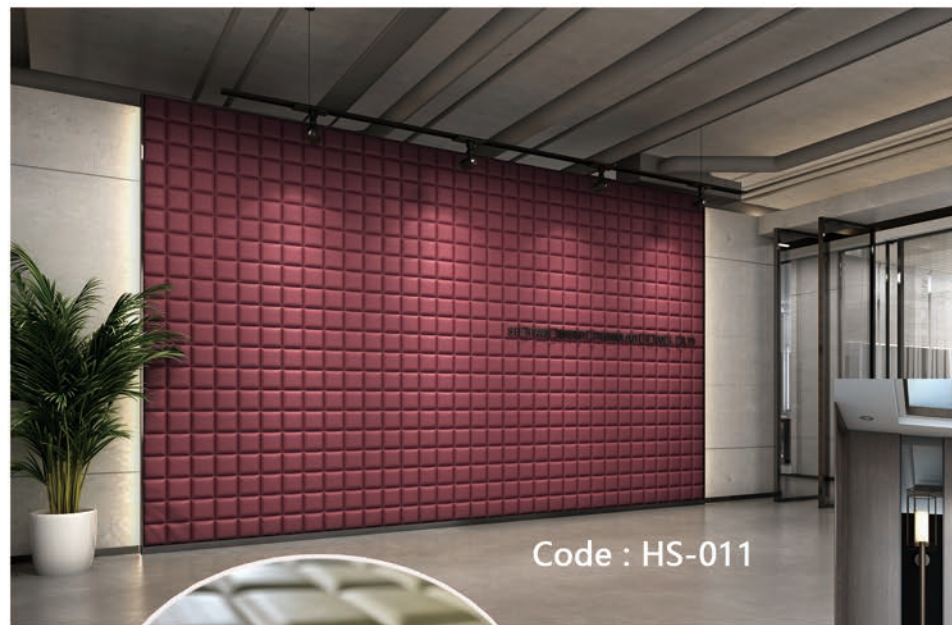

Code : HS-011



Code : V-810

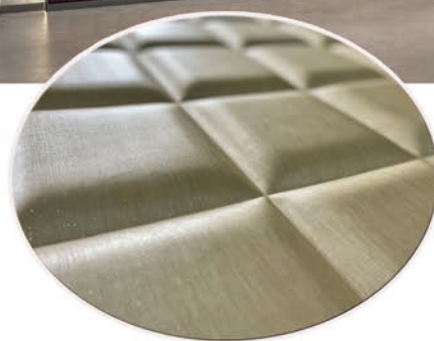

Feature wall / Code : HS-339






Public restroom decor / Code : HS-512



Sweet house decor / Code : V-802




Hotel elevator corridor / Code : V-804

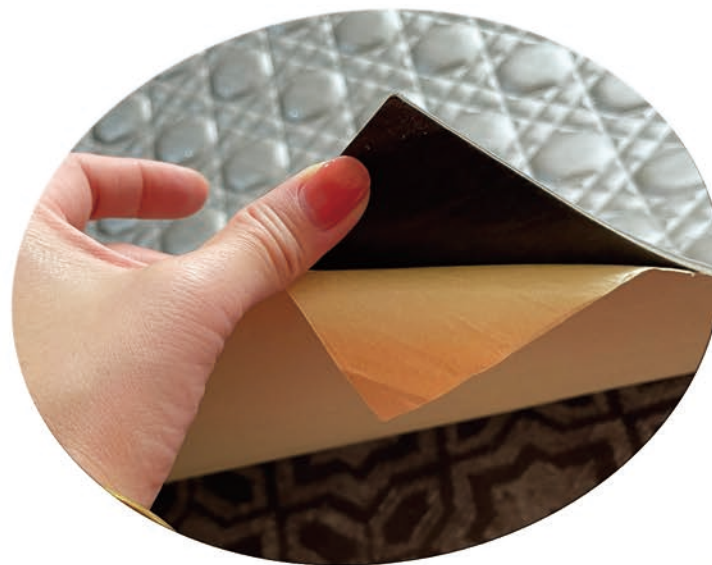

Code : HS-332

Item No: Dior Love  
Size: 600x2700x6mm

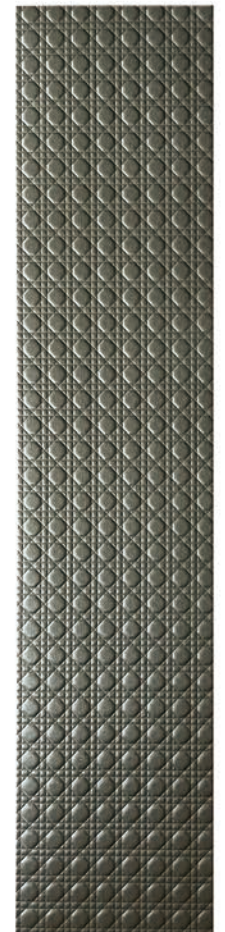

2700mm

600mm

Thickness: 6 mm






3D wall sheet for company reception / Code : HS-505B



Code : V-804

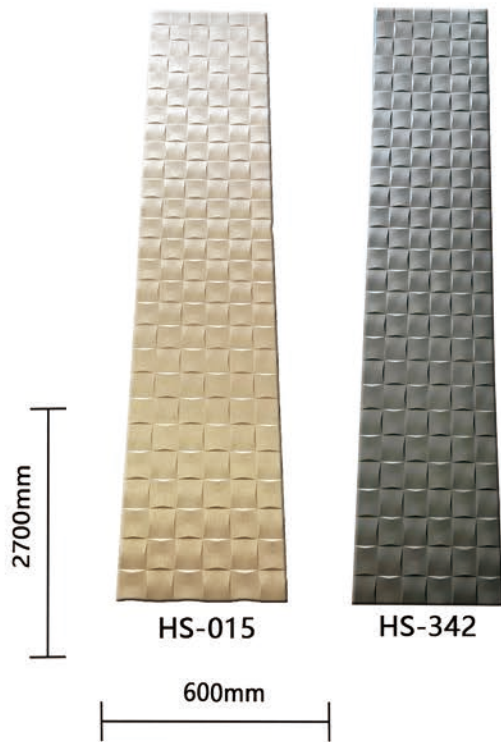

HS-015

HS-342

600mm

2700mm

Thickness: 7 mm  
 Item No: Zen  
 Size: 600x2700x7mm



Luxury living room design / Code : HS-016





Functional Room /Code : V-810

Villa Decor / Code : HS-339



Hotel Lobby / Code : HS-018



Code : HS-505B

2700mm

600mm

Thickness: 15mm

Item No: Space  
Size: 600x2700x15 mm





Bed Headboard  
Code : V-041



Bed Headboard  
Code : V-810



Code : V-806



Code : V-806




Soft Bed Headboard pad - Code : V-806

Item No: Hamburg  
Size: 400x1200x 35 mm ( + 1mm)  
200x 1100x25mm





Bedhead / Code : HS-011

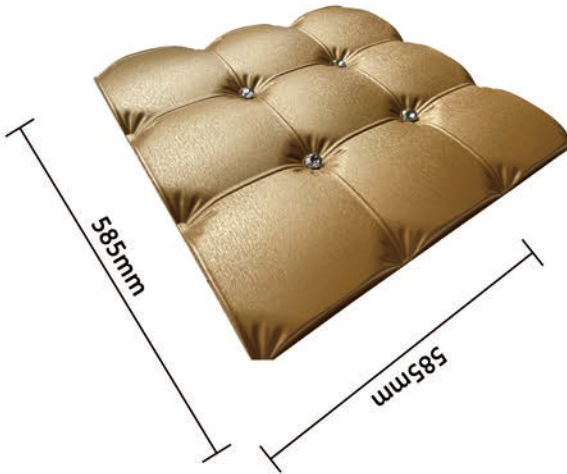

Thickness: 40mm


Item No: ALSTON

Size: 585x585x40mm ( $\pm 3$ mm)



TV wall / Code : HS- 015



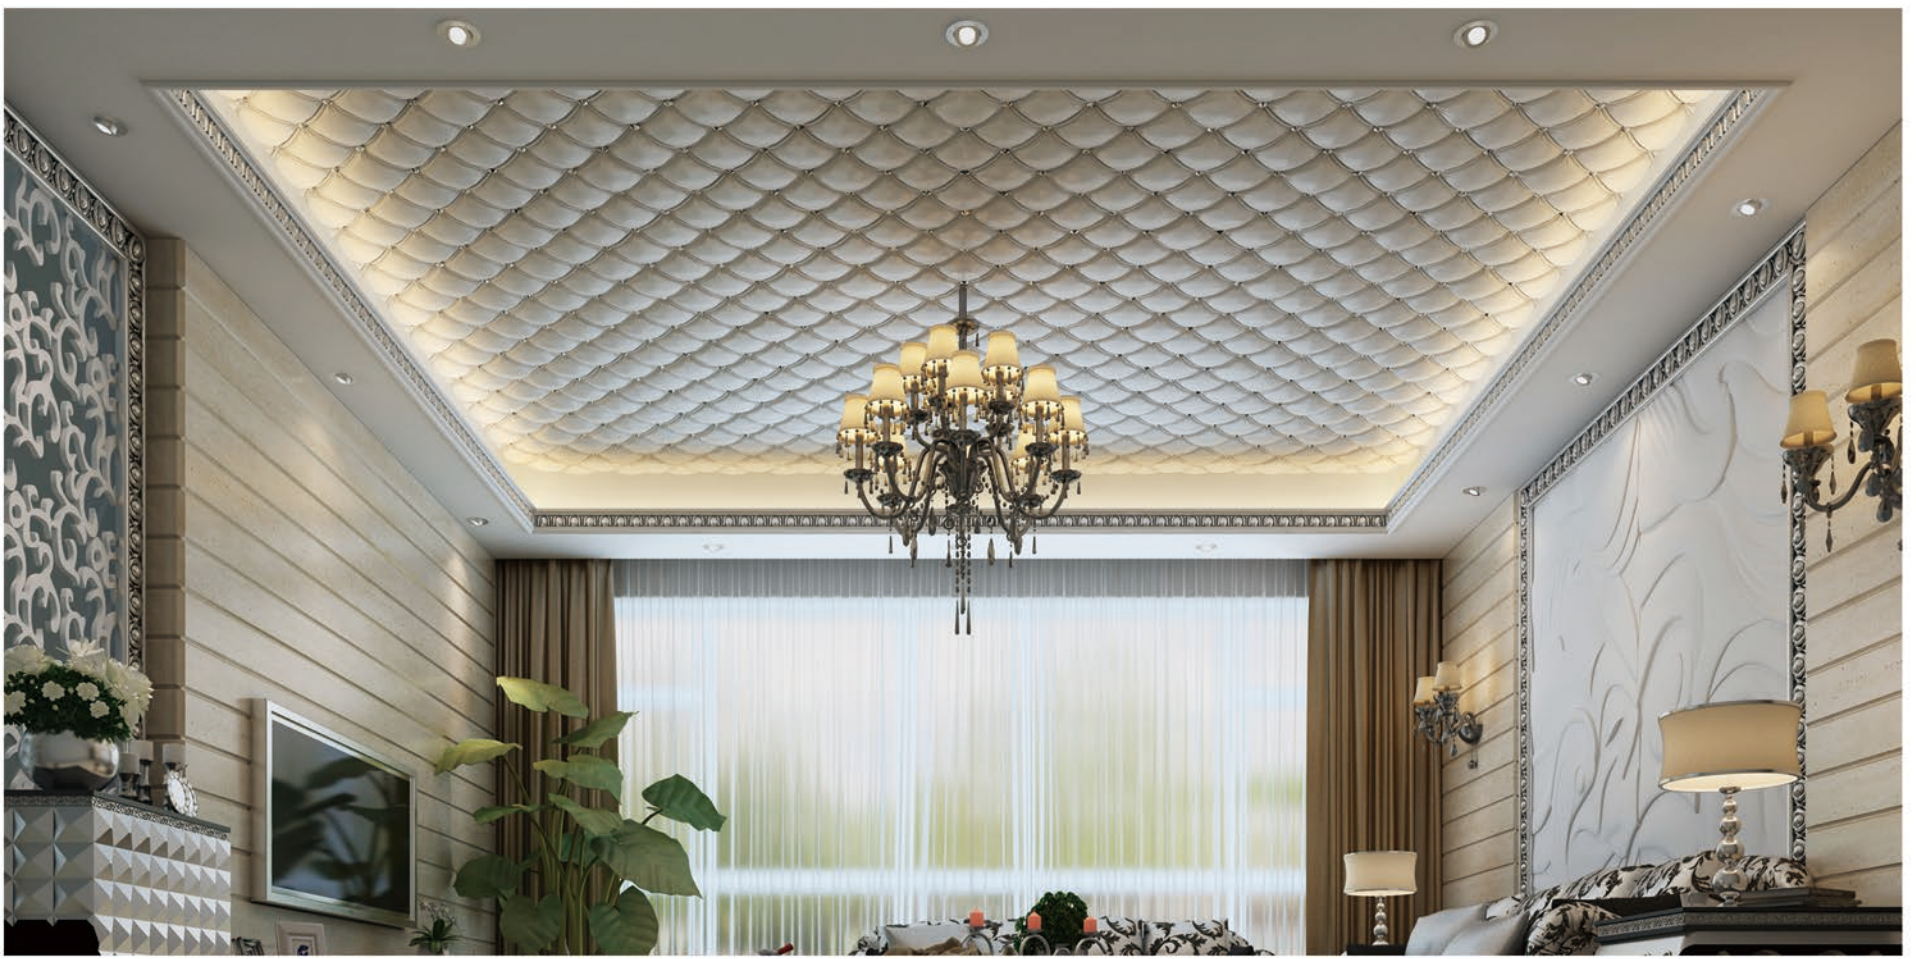

Ceiling / Code : HS- 505a



Alston HS-011





Alston HS-015





Bedhead  
/ Code : HS-015

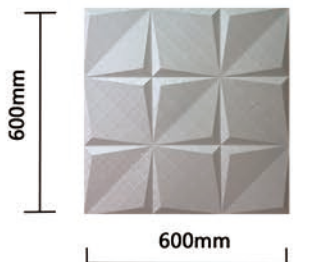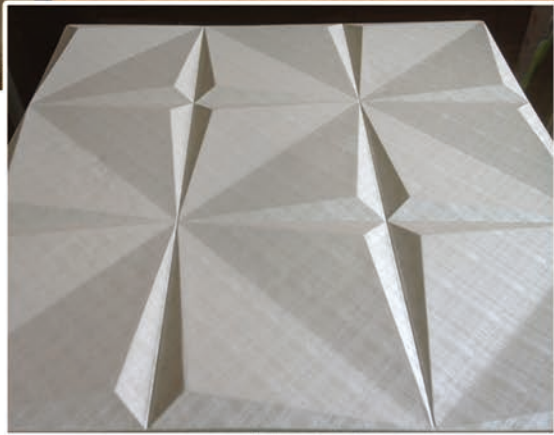

600mm

600mm

Thickness: 15mm

Item No: LV III

Size: 600x600x15mm(±1mm)



Bedhead / Code : HS-010



TV wall / Code : HS-328



Sofa wall / Code : HS-505a





Ceiling in Rest room / Code :HS-505b



Ceiling in Rest room/ Code :HS-505b



TV wall / Code :HS-525



Ceiling in Rest room / Code :HS-505b






Ceiling in Lobby / Code :HS-015



Ceiling in Lobby / Code :HS-015

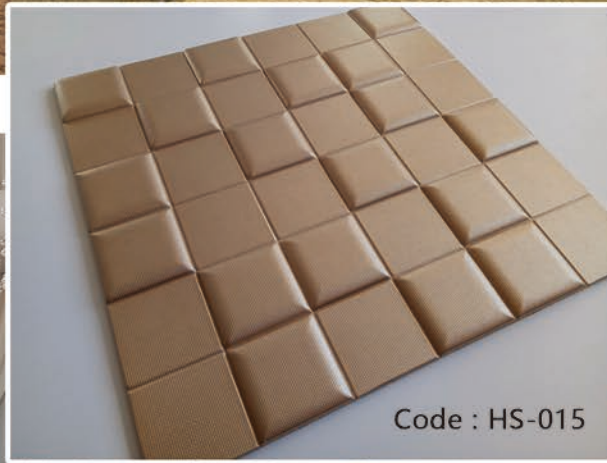

Code : HS-015



Sofa wall / Code :HS- 016



Coffee house / Code : HS-019



TV wall / Code : HS-012





Aisle/ Code :HS-339



Bedhead/ Code :HS-328



Code :HS-326



600mm  
600mm  
Thickness: 10mm

Item No: Chanel  
Size: 600x600x10mm (±1mm)



Living room Code :HS-326






Sofa wall / Code : HS-326




Hotel Bedhead / Code : HS-018

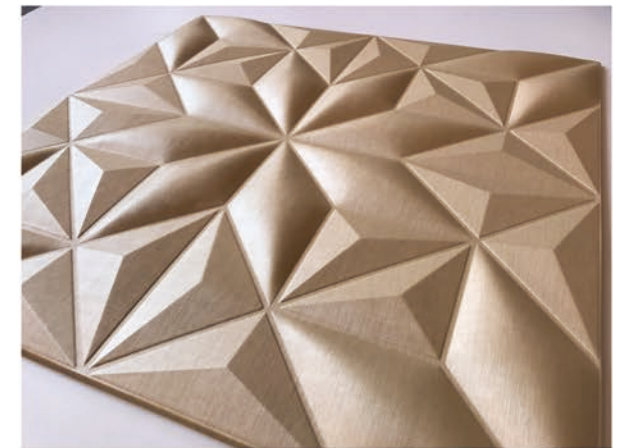

Code : HS-505b



Chamber / Code : HS-339

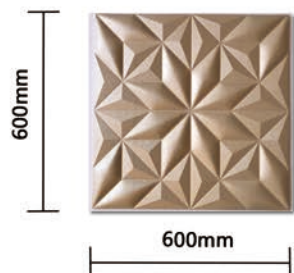

Item No: Engry stone  
Size: 600x600x22mm (+1mm)

Thickness: 22mm



Sofa wall / Code : HS-328






Bedhead / Code : HS-061



Chamber / Code : HS-015



Interrogation Room for Police / Code : HS-012

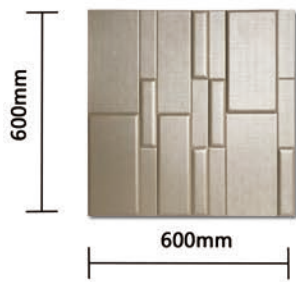

Thickness: 10 mm



Code : HS-505b



Sofa wall / Code : HS-019

Item No: Tommy  
Size: 600x600x10mm (±1mm)






Home Theater / Code : HS-016



Code : HS- 326




Living Room / Code : HS-505b

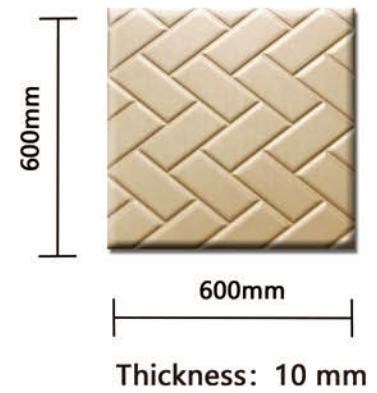


Item No: Road  
 Size: 600x600x10mm (±1mm)



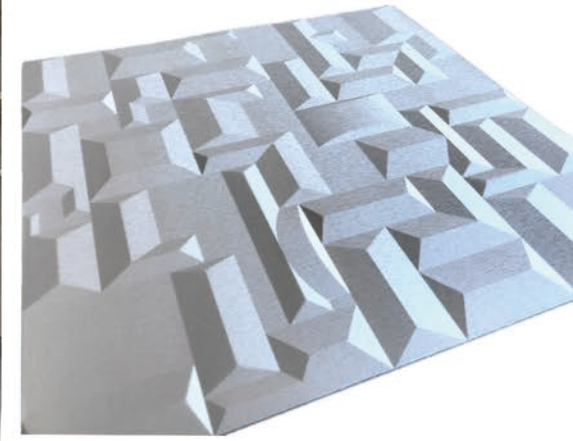

Villa lobby / Code : HS-015

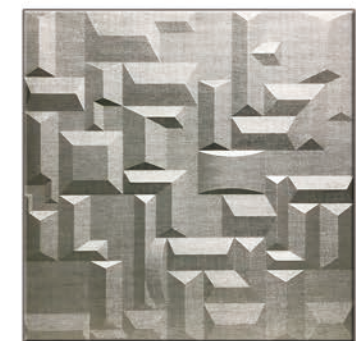

600mm

600mm

Code : HS-326

Thickness: 10 mm

Item No: Forbbiden city

Size: 600x600x10mm (±1mm)

Hotel Lobby / Code : HS-326







TV wall / Code: HS-016



Sofa wall / Code: HS-339

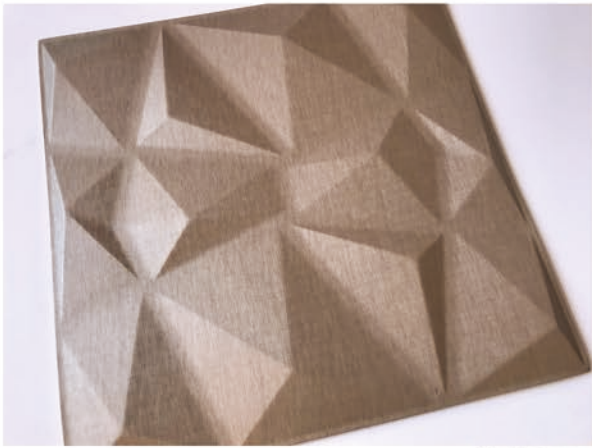

Code: HS-326

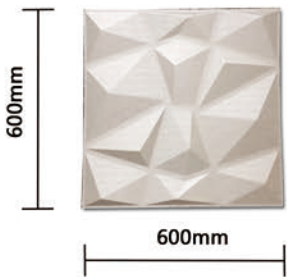

600mm

600mm

Thickness: 22mm

Item No: Prism

Size: 600x600x22mm (±1mm)



Hotel Bedhead / Code: HS-012






Living Room / Code HS-012




Living Room




Bedhead

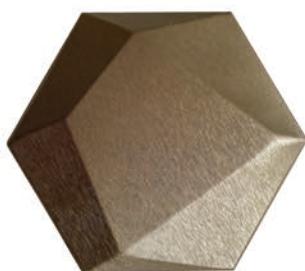


HS-013

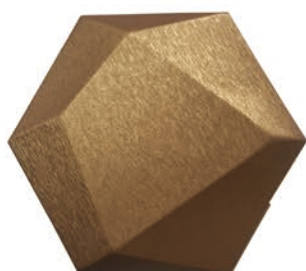

HS-016

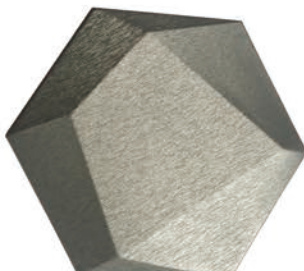


HS-019

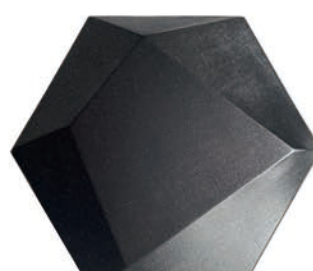

HS-330



HS-015

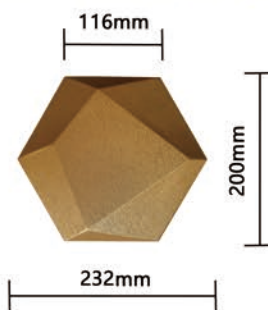


Thickness (厚度): 20mm


Item No: Rocky

Size: 232x200x20mm



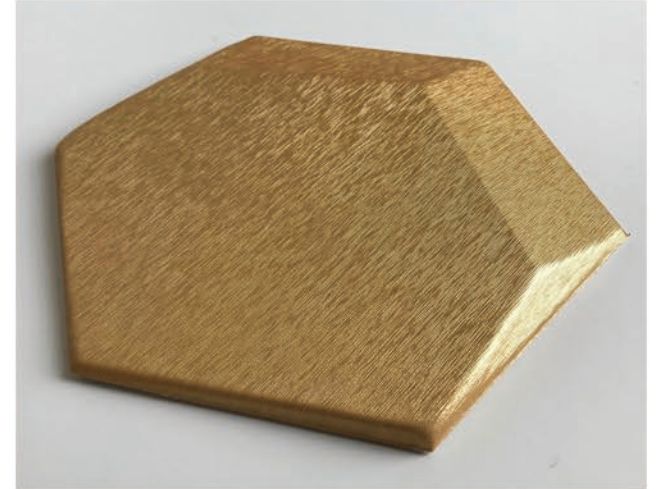

Living Room / Code : HS-015

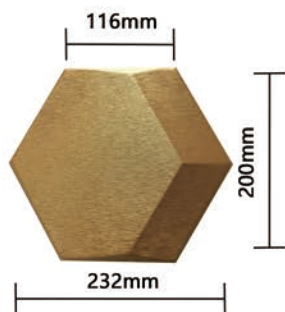

Thickness: 20mm

Item No: Plato  
Size: 232x200x20mm




Reading Room / Code : HS-016



## Installation guide I



Make sure the surface of the wall is clean. For lime wall, please paint with a coat of latex. Square off the wall according to the size of panels.

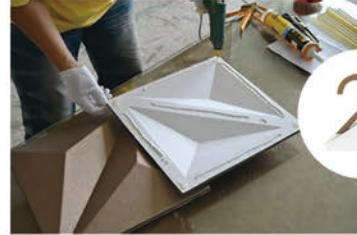

Silicon gun




Silicon



Hot-melt Glue Gun



Hot-melt Stick  
or double side tape

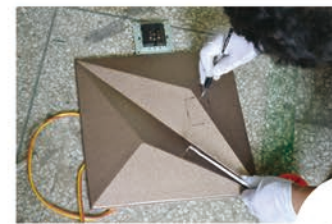

Apply the first panel on the lined bottom middle position, then, go ahead with the neighbour panels by the same way. When applying on the wall, press a little bit for around 15 seconds to make sure of no gap between. When the size of the wall won't match the panels, cut the panels by utility knife as need.

When there is outlet, measure the position on the panel and cut. Then put the inner box in the hole, cover the outlet.



المختص  
للديكور  
The  
Specialist  
for Decoration



[www.sdecorationsa.com](http://www.sdecorationsa.com)







